












Color Shortcut Keys



-  In normal operation, press this key to enable Timeshift function. In other menus, this key may act as delete function.
-  In normal operation, press this key to bring up Upcoming Recording Schedule List so user can take a quick glance of the recording schedules.
-  In normal operation, press this key to bring up Manual Timer Recording screen so user can set recording date, time and other information. In Upcoming Recording Schedule screen, press this key to show the recent 3 recordings quick list.
-  In normal operation, press this key to bring up playback screen (**media player -> recordings**) so user can play and watch the recorded show.

Playback Recorded Shows




-  Press this key to display the list of the recorded shows. Press Up and Down keys to highlight a show.
-  Press Up and Down keys to highlight a show.
-  Press Quick key to display more options.
-  Press Green key to rename the recorded show.
-  Press Red key to delete the highlight show.
-  Press OK key to play the show in a full video screen.
-  Turn on and off Close caption during playback.





Toggle between two Tuners

-  In Tuner1, press this key will change to Tuner2. Press again, change back to Tuner1.
-  Bring up Input pop-up menu, then select either Tuner1 or Tuner2 to switch to.

Change Output Video Resolution

-  Press V.MODE key to change between 720p or 1080p HDMI output.
-  In Quick Menu, select "Output Resolution". Then highlight either 720p or 1080p.
-  In main Menu, select Picture option -> HDMI Output Resolution. Then highlight either 720p or 1080p.


QUICK Access Menu

-  In normal operation, press Quick key to access functions for PICTURE, SOUND, Output Resolution, Scale Window, System Info, Timeshift Duration, and USB Disk Status.
-  In Playback Preview screen (**Media Player -> Recordings**), press Quick key to access Sort, Forward Skip Time, Backward Skip Time, Scale Window, USB Disk Status and Output Resolution.
-  In Playback Full screen, press Quick key to access many similar features.




Full HD 1080p Dual Tuner Digital HDTV Recorder, Receiver and Media Center Box

Quick Tips Guide

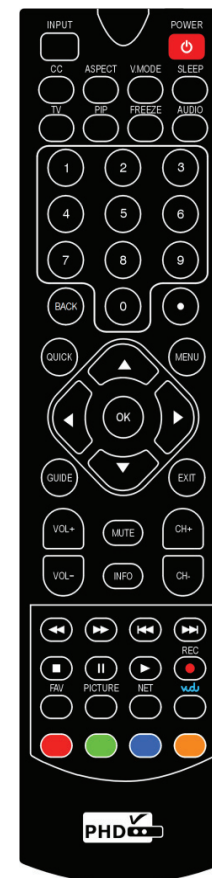


DVR Controls

- Pause
- Play
- Forward Skip
- Backward Skip (20s, 30s, 60s, 120s jump durations)
- Fast Forward
- Rewind (Fast Backward). Press this key multiple times to create 2x, 4x, 8x, 16x, 32x, 64x, 128, and 256x different speeds

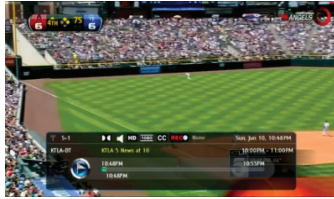

Time-Shifting

- In normal operation, press Red key to enable Timeshift function. After confirm Yes to start, Timeshift is activated. Timeline progress bar is displayed on the bottom of TV screen.

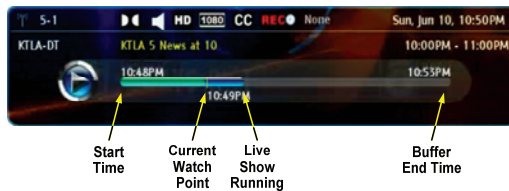

- The green bar indicates the current moment that you are watching now from TV. The blue bar indicates the real live TV show displaying moment.
- Use remote control action buttons to adjust the speed and pause live TV, or stop the video at any point you prefer.
- Press STOP or Red remote key again to stop timeshift function. "Stop Timeshift" screen will pop up. To confirm stopping timeshifting, select the "Yes" option.


Recording Live TV

- Press REC key during watching TV. "Record Now" screen will pop up. Select the proper option to record live
- TV within 30m, 1hr, 2 hrs. or 4 hrs. time frame instantly.



Setting up Manual Recording

- Press Blue key to bring up manual timer recording screen. Then inside the screen to set which tuner, channel#, date/time duration and recording type of the exact schedule for your next recording. Go to main Menu -> Record -> Manual Schedule to set up the same way.

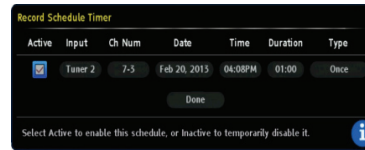

Setting up Guide Recording

- Press GUIDE key to bring up Program Guide screen. use navigation keys UP and DOWN to search the desired channel. Then use RIGHT key to move to proper program title for recording.
- After highlighted the program title, press REC key to show "Record Options" screen and set up proper options for this program schedule.



Electronic Program Guide (EPG)

The Electronic Program Guide (EPG) provides users with program schedules and an overview of program content on each channel at a specific time. It is currently free from TV broadcasters.



1. Current Guide Status, 2. Channel Name list, 3. Program Titles, 4. Current TV, 5. Program Description, 6. Guide Navigations.

Upcoming Recording List

- Press this key or Menu -> Record -> Upcoming Recordings to bring up Upcoming List screen.
- Highlight each schedule to review or edit (update) channel number, schedule time, duration, status, type and active options.
- Press this key to delete the unwanted schedule.
- Press this key to bring up Last 3 recent Recordings History List



Recording History List

- In main Menu -> Record -> Recording History to bring up the past recorded show list for reference.